

Part Number/Plating Cross Reference

Part Number	Product Type	Page Number	Finish Code	Part Number	Product Type	Page Number	Finish Code
7/16 632 BET	SC Screw	page 76	Tin	1072	IDC For #19-18 AWG Magnet Wire	page 58	6
7/16 SEMS	Screw	page 76	Zinc	1090	Accu-Pak™ Receptacle	page 46	6
348	Screw Terminal	page 74	0	1092-6	Accu-Pak™ Receptacle	page 48	6
731	Screw Terminal	page 73	0	1093	Accu-Pak™ Receptacle	page 46	6
792	Screw Terminal	page 74	0	1100-6	Accu-Pak™ Receptacle	page 36	6
798	Fuse Clip Receptacle	page 69	0	1101-6	Accu-Pak™ Receptacle	page 37	6
834	Quick Disconnect Terminal	page 14	0	1108	Screw Terminal	page 73	0
835	Quick Disconnect Terminal	page 14	0	1112-6	Quick Disconnect Terminal	page 25	6
836/836-Tape	Quick Disconnect Terminal	page 21	0	1113-6	Quick Disconnect Terminal	page 25	6
892	Quick Disconnect Terminal	page 20	0	1116	Screw Terminal	page 72	11
893	Quick Disconnect Terminal	page 20	0	1116 ST.S	Screw Terminal	page 72	11
894	Quick Disconnect Terminal	page 16	0	1117	Screw Terminal	page 72	11
895	Quick Disconnect Terminal	page 16	0	1117 ST.S	Screw Terminal	page 72	11
901	Quick Disconnect Terminal	page 27	0	1118-6	Accu-Pak™ Receptacle	page 49	6
906	Quick Disconnect Terminal	page 22	0	1119-6	Torsion-Lok™ IDC	page 56	6
926	Fuse Clip Receptacle	page 69	0	1131	Quick Disconnect Terminal	page 26	0
927	Fuse Clip Receptacle	page 69	0	1141	Quick Disconnect Terminal	page 17	0
928-No Screw	Screw Terminal	page 75	0	1154-6	Accu-Pak™ Receptacle	page 45	6
928	Screw Terminal	page 75	0	1158 ST.S	Screw Terminal	page 74	0
934 ST.S	Screw Terminal	page 73	0	1166	Quick Disconnect Terminal	page 18	0
934 MSS	Screw Terminal	page 73	0	1172	Quick Disconnect Terminal	page 18	0
948	Quick Disconnect Terminal	page 15	0	1173	Quick Disconnect Terminal	page 26	0
949	Quick Disconnect Terminal	page 15	0	1174	Torsion-Lok™ IDC	page 57	6
953	Quick Disconnect Terminal	page 25	0	1179	SMT Jumper	page 6	6
953-MOD	Quick Disconnect Terminal	page 24	0	1179T	SMT Jumper	page 6	6
956/956-No Hole	Quick Disconnect Terminal	page 19	0	1182	Torsion-Lok™ IDC	page 55	0
957	Quick Disconnect Terminal	page 19	0	1183	Torsion-Lok™ IDC	page 55	0
972	Quick Disconnect Terminal	page 23	0	1184	SMT Fuse Clip Connector	page 7	6
972-TAB	Quick Disconnect Terminal	page 24	0	1184T	SMT Fuse Clip Connector	page 7	6
983	Accu-Pak™ Receptacle	page 47	0	1185	Torsion-Lok™ IDC	page 57	0
984	Accu-Pak™ Receptacle	page 47	0	1187-6	Top Entry 2 Beam Receptacle	page 42	6
990	Fuse Clip Receptacle	page 68	0	1188-6	Accu-Pak™ Receptacle	page 49	6
1021	Quick Disconnect Terminal	page 21	0	1193-6	Bottom Entry 2 Beam Receptacle	page 40	6
1022-6	Accu-Pak™ Receptacle	page 44	6	1195	SMT Quick Disconnect Terminal	page 6	6
1024	Quick Disconnect Terminal	page 16	0	1198	Quick Disconnect Terminal	page 21	0
1025	Accu-Pak™ Receptacle	page 43	6	1200-6	Bottom Entry 2 Beam Receptacle	page 40	6
1026	Accu-Pak™ Receptacle	page 43	6	1201	Quick Disconnect Terminal	page 14	0
1027	Quick Disconnect Terminal	page 16	0	1202 ST.S	Screw Terminal	page 72	11
1030	Screw Terminal	page 72	0	1213-680-6	SMT Surface Mountable Pin	page 4	6
1032	Test Point Terminal	page 33	0	1216-6	Surface Mount Post	page 4	6
1033	Test Point Terminal	page 33	0	1222-6	Surface Mount Post	page 4	6
1039	Torsion-Lok™ IDC	page 56	0	1225-6	Accu-Pak™ Receptacle	page 45	6
1041	Quick Disconnect Terminal	page 23	0	1227-6	SMT IDC	page 8, 54	6
1042	Quick Disconnect Terminal	page 18	0	1230	SMT Fuse Clip	page 7	6
1045	Quick Disconnect Terminal	page 22	0	1230T	SMT Fuse Clip	page 7	6
1047	Fuse Clip Receptacle	page 68	0	1235	SMT IDC	page 8, 54	0
1048	Fuse Clip Receptacle	page 68	0	1235T	SMT IDC	page 8, 54	0
1049-030	Test Point Terminal	page 33	0	1237-6	SMT Top-Entry Receptacles	page 7	6
1050-030	Test Point Terminal	page 33	0	1237-6T	SMT Top-Entry Receptacles	page 7	6
1057	Quick Disconnect Terminal	page 23	0	1238-6	SMT Bottom-Entry Receptacles	page 7	6
1058	Test Point Terminal	page 32	0	1238-6T	SMT Bottom-Entry Receptacles	page 7	6
1059	Test Point Terminal	page 32	0	1241-6	Accu-Pak™ Receptacles	page 43	6
1060	Quick Disconnect Terminal	page 22	0	1242-375-SP	SMT Surface Mountable Pin	page 4	SP
1061	Quick Disconnect Terminal	page 21	0	1243-6	SMT Quick Disconnect Terminal	page 6	6
1062-101-6	Bottom Entry 4 Beam Receptacle	page 39	6	1244-6	SMT Quick Disconnect Terminal	page 6	6
1062-200-6	Bottom Entry 4 Beam Receptacle	page 38	6	1245	SMT IDC	page 8, 54	0
1062-300-6	Bottom Entry 4 Beam Receptacle	page 38	6	1245T	SMT IDC	page 8, 54	0
1062-400-6	Bottom Entry 4 Beam Receptacle	page 38	6	1248-580-6	SMT Surface Mountable Pin	page 4	6
1062-6	Bottom Entry 4 Beam Receptacle	page 38	6	6021-6	Quick Disconnect Terminal	page 21	6
1063	Quick Disconnect Terminal	page 14	0	6022-6	Accu-Pak™ Receptacle	page 44	6
1064	Quick Disconnect Terminal	page 14	0	6024-6	Quick Disconnect Terminal	page 16	6
1065	Quick Disconnect Terminal	page 20	0	6025-6	Accu-Pak™ Receptacle	page 43	6
1066	Quick Disconnect Terminal	page 20	0	6026-6	Accu-Pak™ Receptacle	page 43	6
1069	Test Point Terminal	page 32	0	6027-6	Quick Disconnect Terminal	page 16	6

See page 91 for finish code detail.

Part Number/Plating Cross Reference

Part Number	Product Type	Page Number	Finish Code	Part Number	Product Type	Page Number	Finish Code
6032-6	Test Point Terminal	page 33	6	6148-6	Quick Disconnect Terminal	page 19	6
6033-6	Test Point Terminal	page 33	6	6149-6	Quick Disconnect Terminal	page 19	6
6037-6	Accu-Pak™ Receptacle	page 44	6	6152-6	Quick Disconnect Terminal	page 27	6
6039-6	Torsion-Lok™ IDC	page 56	6	6154-6	Accu-Pak™ Receptacle	page 45	6
6041-6	Quick Disconnect Terminal	page 23	6	6166-6	Quick Disconnect Terminal	page 18	6
6042-6	Quick Disconnect Terminal	page 18	6	6172-6	Quick Disconnect Terminal	page 18	6
6045-6	Quick Disconnect Terminal	page 22	6	6173-6	Quick Disconnect Terminal	page 26	6
6049-030-6	Test Point Terminal	page 33	6	6174-6	Torsion-Lok™ IDC	page 57	6
6050-030-6	Test Point Terminal	page 33	6	6179-6	SMT Jumper	page 6	6
6057-6	Quick Disconnect Terminal	page 23	6	6182-6	Torsion-Lok™ IDC	page 55	6
6058-6	Test Point Terminal	page 32	6	6183-6	Torsion-Lok™ IDC	page 55	6
6059-6	Test Point Terminal	page 32	6	6184-6	SMT Fuse Clip Connector	page 7	6
6060-6	Quick Disconnect Terminal	page 22	6	6185-6	Torsion-Lok™ IDC	page 57	6
6061-6	Quick Disconnect Terminal	page 21	6	6186-6	Quick Disconnect Terminal	page 15	6
6062-101-6	Bottom Entry 4 Beam Receptacle	page 39	6	6187-6	Top Entry 2 Beam Receptacle	page 42	6
6062-200-6	Bottom Entry 4 Beam Receptacle	page 38	6	6188-6	Accu-Pak™ Receptacle	page 49	6
6062-300-6	Bottom Entry 4 Beam Receptacle	page 38	6	6193-6	Bottom Entry 2 Beam Receptacle	page 40	6
6062-400-6	Bottom Entry 4 Beam Receptacle	page 38	6	6195-6	SMT Quick Disconnect Terminal	page 6	6
6062-6	Bottom Entry 4 Beam Receptacle	page 38	6	6198-6	Quick Disconnect Terminal	page 21	6
6063-6	Quick Disconnect Terminal	page 14	6	6200-6	Bottom Entry 2 Beam Receptacle	page 40	6
6064-6	Quick Disconnect Terminal	page 14	6	6201-6	Quick Disconnect Terminal	page 14	6
6065-6	Quick Disconnect Terminal	page 20	6	6212-6	Quick Disconnect Terminal	page 24	6
6066-6	Quick Disconnect Terminal	page 20	6	6216-6	Surface Mount Post	page 4	6
6069-6	Test Point Terminal	page 32	6	6222-6	Surface Mount Post	page 4	6
6072-6	IDC For #19-18 AWG Magnet Wire	page 58	6	6224-6	Quick Disconnect Terminal	page 23	6
6073-350-6	Accu-Post™ Terminal	page 62	6	6225-6	Accu-Pak™ Receptacle	page 45	6
6073-360-6	Accu-Post™ Terminal	page 62	6	6227-6	SMT IDC	page 8, 54	6
6073-380-6	Accu-Post™ Terminal	page 62	6	6230-6	SMT Fuse Clip	page 7	6
6073-400-6	Accu-Post™ Terminal	page 62	6	6233-AAAA-BBB	SMT Variable Size Jumper	page 6	11
6073-490-6	Accu-Post™ Terminal	page 62	6	6241-6	Accu-Pak™ Receptacle	page 43	6
6073-xxx-xxx	Accu-Post™ Terminal	page 62	6	6243-6	SMT Quick Disconnect Terminal	page 6	6
6075-250-6	Accu-Post™ Terminal	page 63	6	6244-6	SMT Quick Disconnect Terminal	page 6	6
6075-312-6	Accu-Post™ Terminal	page 63	6	6834-6	Quick Disconnect Terminal	page 14	6
6075-375-6	Accu-Post™ Terminal	page 63	6	6835-6	Quick Disconnect Terminal	page 14	6
6075-450-6	Accu-Post™ Terminal	page 63	6	6836-6	Quick Disconnect Terminal	page 21	6
6075-xxx-6	Accu-Post™ Terminal	page 63	6	6894-6	Quick Disconnect Terminal	page 16	0
6077-6	Quick Disconnect Terminal	page 17	6	6895-6	Quick Disconnect Terminal	page 16	0
6078-6	Quick Disconnect Terminal	page 17	6	6901-6	Quick Disconnect Terminal	page 27	6
6080-6	Quick Disconnect Terminal	page 27	6	6948-6	Quick Disconnect Terminal	page 15	6
6090-6	Accu-Pak™ Receptacle	page 46	6	6949-6	Quick Disconnect Terminal	page 15	6
6092-6	Accu-Pak™ Receptacle	page 48	6	6956-6	Quick Disconnect Terminal	page 19	6
6093-6	Accu-Pak™ Receptacle	page 46	6	6957-6	Quick Disconnect Terminal	page 19	6
6100-6	Accu-Pak™ Receptacle	page 36	6	A1-xxx-xx	SMT Surface Mountable Pins	page 4	6
6101-6	Accu-Pak™ Receptacle	page 37	6	A2-680-6	SMT Surface Mountable Solid Pins	page 9	6
6110-6	Quick Disconnect Terminal	page 26	6	A3-680-6	SMT Surface Mountable Solid Pins	page 9	6
6112-6	Quick Disconnect Terminal	page 25	6	A4-680-6	SMT Surface Mountable Solid Pins	page 9	6
6113-6	Quick Disconnect Terminal	page 25	6	CPB 9030	Wire Clamp	page 76	Tin
6114-6	Torsion-Lok™ IDC	page 55	6	H-x-xx-xxx-x	SMT Pin - Headers	page 5	xx
6115-6	Quick Disconnect Terminal	page 20	6	M6111	MAGTERM™ Screw Terminal	page 75	0
6118-6	Accu-Pak™ Receptacle	page 49	6	M6112	MAGTERM™ Screw Terminal	page 75	0
6119-6	Torsion-Lok™ IDC	page 56	6				
6123-6	Accu-Pak™ Receptacle	page 44	6				
6134-6	Quick Disconnect Terminal	page 17	6				
6140-6	Quick Disconnect Terminal	page 17	6				
6141-6	Quick Disconnect Terminal	page 17	6				
6142-6	Quick Disconnect Terminal	page 17	6				
6143-125-xxx	Accu-Post™ Terminal	page 64	6				
6143-250-xxx	Accu-Post™ Terminal	page 64	6				
6143-312-xxx	Accu-Post™ Terminal	page 64	6				
6143-375-xxx	Accu-Post™ Terminal	page 64	6				
6143-437-xxx	Accu-Post™ Terminal	page 64	6				
6143-500-xxx	Accu-Post™ Terminal	page 64	6				
6143-575-xxx	Accu-Post™ Terminal	page 64	6				
6143-xxx-xxx	Accu-Post™ Terminal	page 64	6				

See page 91 for finish code detail.