

Insertion Machine Tooling per Terminal Part Number

Application Tooling is available for the following part numbers.

Part Number	Product Type	Tool Set	9700	9700 XY	Part Number	Product Type	Tool Set	9700	9700 XY
6021	Quick Disconnect Terminal	-7	✓	✓	6080	Quick Disconnect Terminal	-27	✓	✓
6022	Accu-Pak Receptacle	-8	✓	✓	6092	Accu-Pak Receptacle	-24	✓	✓
6024	Quick Disconnect Terminal	-2C	✓	✓	6101	Bottom Entry 2 Beam Receptacle	-57	✓	✓
6025	Accu-Pak Receptacle	-9	✓	✓	6110	Quick Disconnect Terminal	-48	✓	✓
6026	Accu-Pak Receptacle	-9A	✓	✓	6112	Quick Disconnect Terminal	-37	✓	
6027	Quick Disconnect Terminal	-2B	✓	✓	6113	Quick Disconnect Terminal	-38	✓	
6032	Test Point Terminal	CF	✓		6114	Torsion-Lok IDC	-41	✓	✓
6033	Test Point Terminal	CF	✓		6115	Quick Disconnect Terminal	-43	✓	✓
6037	Accu-Pak Receptacle	-8	✓	✓	6118	Accu-Pak Receptacle	-24	✓	✓
6039	Torsion-Lok IDC	-11	✓	✓	6119	Torsion-Lok IDC	CF	✓	
6041	Quick Disconnect Terminal	-10	✓	✓	6123	Accu-Pak Receptacle	-8	✓	✓
6042	Quick Disconnect Terminal	-28	✓	✓	6134	Quick Disconnect Terminal	-44A	✓	✓
6045	Quick Disconnect Terminal	-19	✓	✓	6140	Quick Disconnect Terminal	-46A	✓	✓
6057	Quick Disconnect Terminal	-20	✓	✓	6141	Quick Disconnect Terminal	-46	✓	✓
6058	Test Point Terminal	-14A	✓	✓	6142	Quick Disconnect Terminal	CF	✓	✓
6059	Test Point Terminal	-14	✓	✓	6143-xxx	Accu-Post Terminal	-32	✓	✓
6060	Quick Disconnect Terminal	-39	✓	✓	6148	Quick Disconnect Terminal	CF	✓	✓
6061	Quick Disconnect Terminal	-12	✓	✓	6149	Quick Disconnect Terminal	CF	✓	✓
6062	Bottom Entry 4 Beam Receptacle	-23A	✓	✓	6152	Quick Disconnect Terminal	-27	✓	✓
6062-xxx	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6154	Accu-Pak Receptacle	-8	✓	✓
6062-100	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6166	Quick Disconnect Terminal	CF	✓	✓
6062-101	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6172	Quick Disconnect Terminal	-49	✓	✓
6062-200	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6173	Quick Disconnect Terminal	-50	✓	
6062-300	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6174	Torsion-Lok IDC	-51	✓	✓
6062-400	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6176	Wire Gripper	-52	✓	✓
6062	Bottom Entry 4 Beam Receptacle	-23	✓	✓	6182	Torsion-Lok IDC	CF	✓	✓
6063	Quick Disconnect Terminal	-17A	✓	✓	6183	Torsion-Lok IDC	CF	✓	✓
6064	Quick Disconnect Terminal	-17	✓	✓	6185	Torsion-Lok IDC	-78	✓	✓
6065	Quick Disconnect Terminal	-2C	✓	✓	6186	Quick Disconnect Terminal	-54	✓	✓
6066	Quick Disconnect Terminal	-2B	✓	✓	6187	Top Entry 2 Beam Receptacle	-23	✓	✓
6069	Test Point Terminal	-15A	✓	✓	6188	Accu-Pak Receptacle	-24	✓	✓
6072	Torsion-Lok IDC	CF	✓	✓	6193	Bottom Entry 2 Beam Receptacle	-23	✓	✓
6072-17	Torsion-Lok IDC	-31	✓	✓	6198	Quick Disconnect Terminal	-7	✓	✓
6073-350	Accu-Post Terminal	-33 (X)	✓	✓	6200	Bottom Entry 2 Beam Receptacle	-23	✓	✓
6073-360	Accu-Post Terminal	-33 (X)	✓	✓	6201	Quick Disconnect Terminal	-55	✓	✓
6073-380	Accu-Post Terminal	-33 (X)	✓	✓	6205	IDC Tab	-56	✓	✓
6073-400	Accu-Post Terminal	-33 (X)	✓	✓	6212	Quick Disconnect Terminal	-20	✓	✓
6073-490	Accu-Post Terminal	-33 (X)	✓	✓	6221	Accu-Pak Receptacle	-58	✓	✓
6073-xxx-x	Accu-Post Terminal	-33 (X)	✓	✓	6224	Quick Disconnect Terminal	-20	✓	✓
6074-060-x	Accu-Post Terminal	-40	✓	✓	6225	Accu-Pak Receptacle	-8	✓	✓
6074-xxx-x	Accu-Post Terminal	-32	✓	✓	6241	Accu-Pak Receptacle	-9A	✓	✓
6075-250	Accu-Post Terminal	-45 (X)	✓	✓	6259	Right Angle Tab	-61	✓	✓
6075-312	Accu-Post Terminal	-45 (X)	✓	✓	6271	PCB Receptacle	-64	✓	✓
6075-375-5	Accu-Post Terminal	-45 (X)	✓	✓	6834	Quick Disconnect Terminal	-3A	✓	✓
6075-450	Accu-Post Terminal	-45 (X)	✓	✓	6835	Quick Disconnect Terminal	-3	✓	✓
6075-500	Accu-Post Terminal	-45 (X)	✓	✓	6836	Quick Disconnect Terminal	-7	✓	✓
6075-625	Accu-Post Terminal	-45 (X)	✓	✓	6894	Quick Disconnect Terminal	-2C	✓	✓
6075-750	Accu-Post Terminal	-45 (X)	✓	✓	6895	Quick Disconnect Terminal	-2B	✓	✓
6075-875	Accu-Post Terminal	-45 (X)	✓	✓	6901	Quick Disconnect Terminal	-4	✓	✓
6075-xxx-x	Accu-Post Terminal	-45 (X)	✓	✓	6948	Quick Disconnect Terminal	-6	✓	✓
6075-930	Accu-Post Terminal	-45	✓	✓	6949	Quick Disconnect Terminal	-6A	✓	✓
6077	Quick Disconnect Terminal	-34	✓	✓	6956	Quick Disconnect Terminal	-5A	✓	✓
6078	Quick Disconnect Terminal	-34A	✓	✓	6957	Quick Disconnect Terminal	-5	✓	✓

CF = Consult Factory